


Monteringsanvisning • Erection Instructions •
 Aufbauanleitung • Opbouwinstructie •
 Instruction de Montage • Instrucciones de montaje

Frontsolsejl
 Front sun canopy
 Fronsonnendach
 Frontzonluifel
 Frontsoltak
 Pare-soleil de facade
 2005

Vejle • Juli 2004

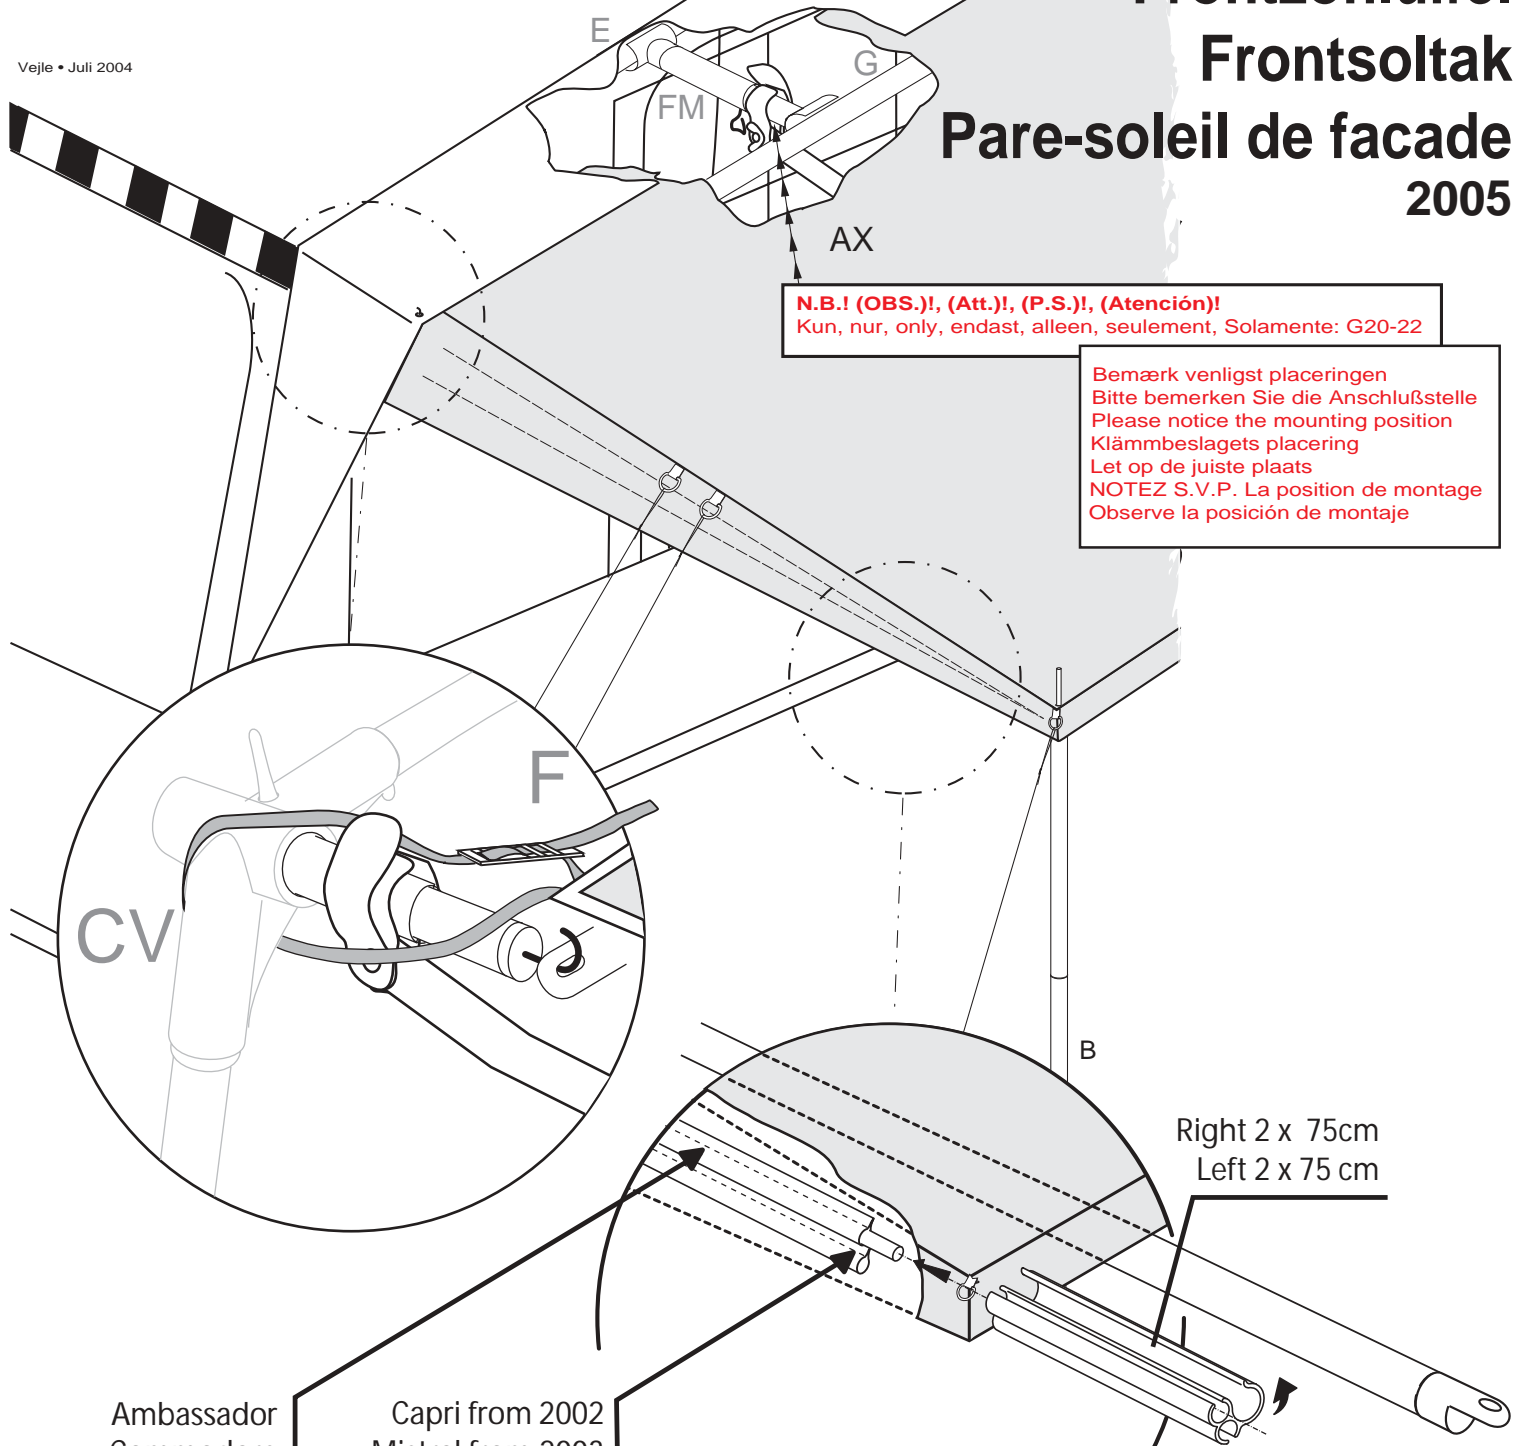


N.B.!(OBS.!), (Att.!), (P.S.!), (Atención)!
 Kun, nur, only, endast, alleen, seulement, Solamente: G20-22

Bemærk venligst placeringen
 Bitte bemerken Sie die Anschlußstelle
 Please notice the mounting position
 Klämbeslagets placering
 Let op de juiste plaats
 NOTEZ S.V.P. La position de montage
 Observe la posición de montaje


Ambassador
 Commodore
 Mistral to 2002
 Capri 2000+2001

Capri from 2002
 Mistral from 2003
 Ambassador Alpha
 Commodore Alpha
 Forum

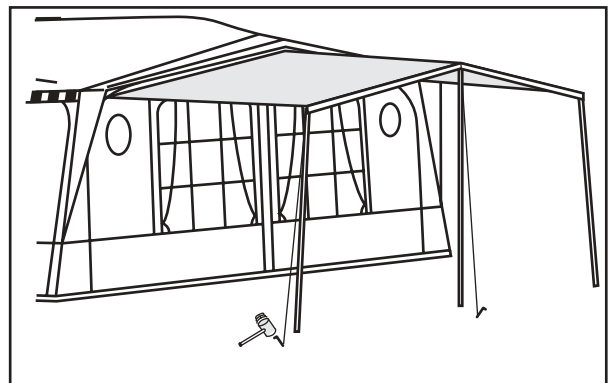


Zinox

G 10-13

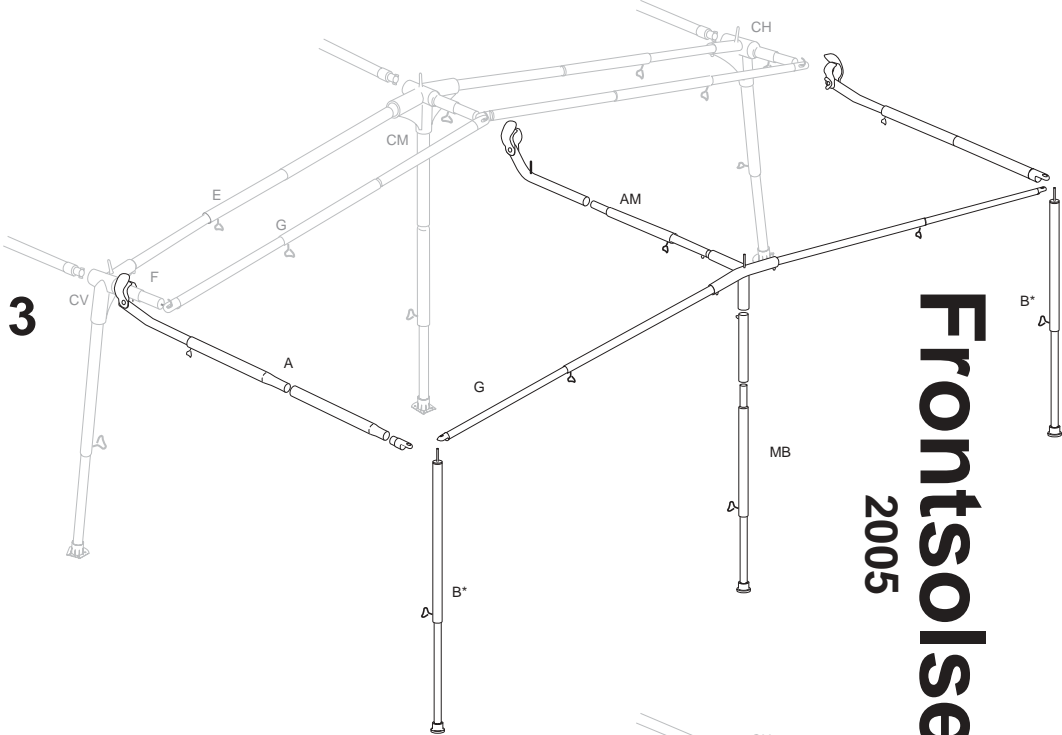

Frontsolsejl
2005

G 14-19

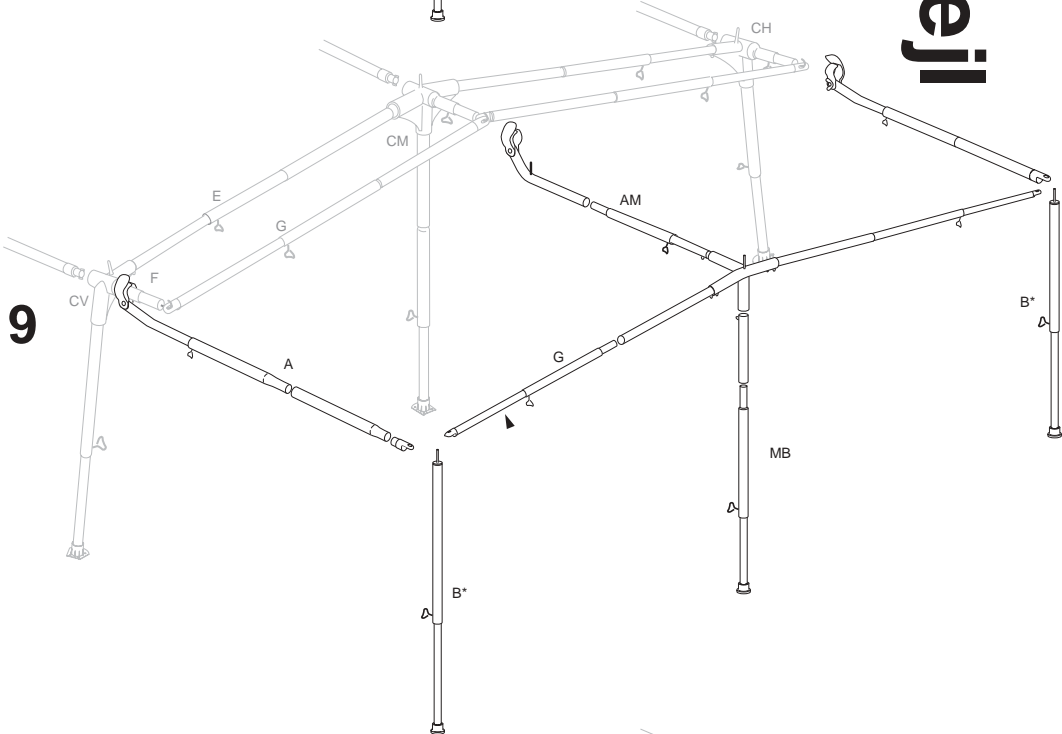

G 20-21

